


# 2014 PP INSTALLATION SUPPLEMENT

## » 1190 ADV SKID PLATE - 60303990044

WWW.KTMUSA.COM

The 2014 1190 ADV PowerParts Skid Plate installation process requires the use of an engine case mounting bolt. In some 2014 1190 ADV models, the hole for inserting the mounting bolt into the engine case is there but not threaded (example below). In this case, the hole will need to be threaded. **\*For 2014 by design for production, this bolt is only required when mounting a PowerParts Skid Plate**

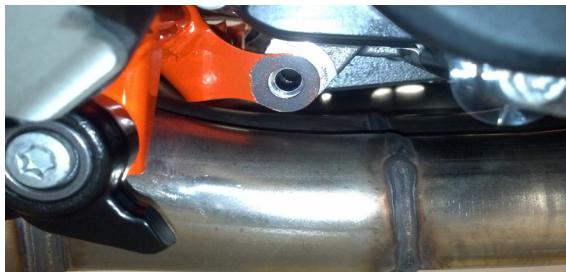

The size of tap needed to add threads to the engine case is a 10mm x 1.5. The recommended drill for this thread tap is 8.5mm and must be used before the tap is inserted to prevent case damage. Only drill into the case 35mm from the outside edge of the frame mount. **\*Reminder - this should only be done if mounting a PowerParts Skid Plate assembly**



Check the original PowerParts Skid Plate mounting instructions to determine the correct size bolt to be used in this location (supplied with the Skid Plate). If the bolt in question is needed, recommended SpareParts bolt is a 10mm x 30mm TORX drive with a 1.5 thread pitch: part number 0035100309. The correct bolt and size for the left side is part number 0035100409. This bolt is 10mm x 40mm with a 1.5 thread pitch TORX drive.



\*This procedure does not qualify for warranty reimbursement

*Always refer to original product instructions. Professional advice and proper installation of KTM PowerParts by an authorized KTM dealer are essential to provide maximum safety and function.*

# KTM POWERPARTS

# KTM

KTM NORTH AMERICA, INC.

38429 Innovation Court // Murrieta, CA 92563 // T: 951-600-8007 // F: 951-600-8866  
1119 Milan Ave // Amherst, OH 44001 // T: 440-985-5995 // F: 440-985-3060